



MRR21 – Wireless Remote

- For use with poly-planar marine systems
- Floating, waterproof design – do not remove remote from rubber housing
- Usage range 15' (5m)

CONTROL & FUNCTIONS KEYS

Power button - to turn the unit on or off.

MUTE button - to mute audio level. Press the button again to release mute function.

TUNE ▲/▼ buttons - to select a station/track number.

MODE button - to cycle through all available sources connected to the system (e.g. RADIO mode to CD mode to AUX IN).

AS/PS button - In radio mode, seeks through the current 6 presets. Press and hold to automatically program the presets with the next detected stations. In other sources, please refer to your stereo owner's manual

Audio button - to select the audio adjustment functions on the stereo



VOL ▲/▼ buttons - to adjust volume level.

FUNCTION -/FUNCTION + button – please refer to your stereo owner's manual for further instruction

Band button - In radio mode, to select between 3FM banks and 2AM banks.

MENU button – please refer to your stereo owner's manual for further instruction

SELECT button - please refer to your stereo owner's manual for

further instruction

Preset 1 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables INTRO scan function.

Preset 2 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables RANDOM function.

Preset 3 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables REPEAT track function.

Preset 4 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables PAUSE function.

Preset 5 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables FOLDER down function. Please refer to your stereo owner's manual for further instruction

Preset 6 button - In radio mode, Press and hold to assign the current station to this preset. In other sources, enables FOLDER up function. Please refer to your stereo owner's manual for further instruction

Battery Installation

- Use battery type CR2032
- Remove remote from rubber housing
- Put a coin in the battery door slot and turn

counter-clockwise

- Hook with thumbnail and pull out battery door
- Replace with fresh battery, be sure to note polarity
- Replace door. Use a coin in the slot and turn clockwise
- Replace remote firmly in rubber housing

WARRANTY INFORMATION

This unit is warranted to be free of defects in material and workmanship for a period of one year. Warranty is subject to proper installation and operation within the published specifications. Except as provided below, Poly Planar will repair or replace, at its discretion, any product returned prepaid to our facility and determined to be defective. Poly Planar is not liable for consequential damages

LIMITS OF LIABILITY

Poly Planar warranty does not cover damage occurred in transit, accident, abuse, misuse, negligence, fire, flood, lightning or unauthorized service. This warranty assumes no responsibility for damages incurred during installation of this equipment. This warranty covers normal consumer use only. In no event shall Poly Planar be liable for special, incidental, or consequential damages.

To obtain service under this warranty, please call Poly-Planar for a RETURN AUTHORIZATION NUMBER.

poly-planar, inc.

Maryland USA

(410) 761-4000

www.polyplanar.com