



CARE AND USE GUIDE

VACUUM INSULATED STAINLESS STEEL FOOD JAR

GENERAL CARE

- Before first use, and as soon as possible after each use, wash all parts with warm, soapy water. Rinse all parts thoroughly and allow time to dry.
- Contents should not be left in the container for longer than 24 hours. As soon as possible after each and every use, wash all parts with warm, soapy water. Rinse all parts thoroughly with clean water. Allow all parts to dry completely prior to next use or storage
- DO NOT use abrasive cleaners or scrubbers since they may dull the finish.
- DO NOT use bleach or cleaners containing chlorine on any parts of the product.
- This product is top-rack dishwasher safe; however, hand washing is recommended as the dishwasher uses harsher detergents and hot water that may affect the appearance of your product.
- Residual liquids, foods, or other contents may become trapped between product components, such as lid parts, container parts, gaskets (flexible band around lid and/or stopper), or straws (if present in the product). Although this product is top-rack dishwasher safe, hand washing is recommended to ensure that all parts of the product are thoroughly cleaned.
- For maximum thermal efficiency, preheat or pre-chill the product just prior to use. Fill with hot/cold tap water, attach lid, let stand 5 to 10 minutes and empty water. After filling container with contents, re-cover with lid to increase thermal efficiency. Never use a microwave, conventional oven, or other heat source for this purpose.

ASSEMBLY & USE

Stopper w/ Lid (If Present):

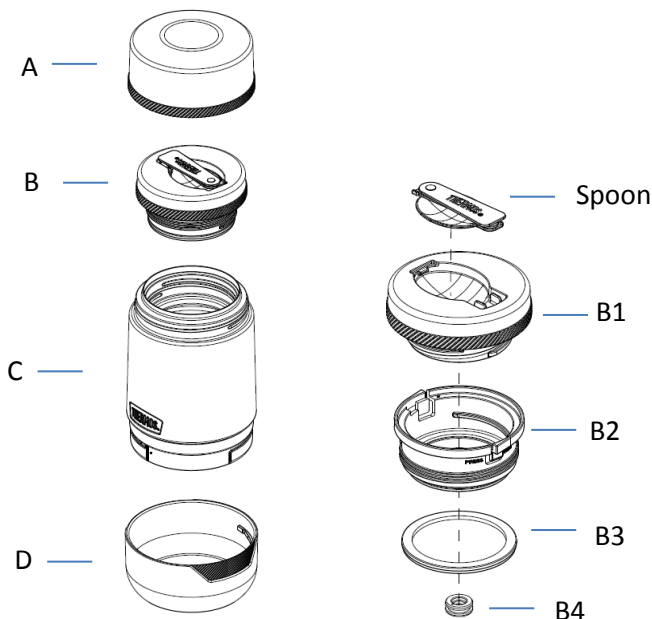


Image for reference only: actual product may vary

1. Remove lid (A) by twisting counterclockwise.
2. Remove spoon (if present) by pulling up on it.
3. Open container (C) by twisting stopper (B) counterclockwise. When removing the stopper, you may notice a slight resistance when twisting the stopper about 1/8 turn. This is normal and continue to twist past this resistance until the stopper is fully removed.
4. Remove gasket (B3) from underside of stopper (B).
5. To remove gasket (B4) from center of stopper (B) underside, firmly hold the bottom of the stopper and press both tabs inward found near the top of B2. With both tabs pressed in, twist the top of the stopper (B) counterclockwise to separate (B2) from (B3). Remove gasket (B4).
6. Remove storage base (D) from container (C) by twisting storage base counterclockwise.
7. Wash all parts separately, then re-assemble.
 - a. Ensure gaskets (B3, B4) are properly seated to minimize leaking.
 - b. To assemble (B2) and (B3) together, place (B2) into (B3), firmly hold (B3) and twist (B2) clockwise until firmly tight.
8. Fill container (C) with contents. Do not overfill: Leave space for stopper (B), to avoid overflow.
9. Replace both stopper (B) and lid (A) by twisting clockwise.
 - a. Spoon (if present) snaps into top of stopper (B) when fully folded and aligned.

WARNINGS

- DO NOT use product in microwave, on stove-top, or in any type of oven.
- NOT RECOMMENDED FOR USE BY CHILDREN: Keep out of the reach of children, especially when product contains hot contents, which may burn or scald user.
- Always test temperature of contents before consuming.
- DO NOT overfill the container: Leave space at top of container for lid and stopper (if present), to avoid overflow. Hot contents may burn or scald user if overflow occurs.
- Check periodically to make sure any gasket (flexible band around lid and/or stopper) is present and properly positioned to prevent contents from passing through lid when lid is closed (if applicable to product). Missing, worn or misaligned gasket may cause product to leak. Leakage of hot contents may burn or scald user, or may cause damage to property stored nearby.
- In general, contents should not be left in container for longer than 24 hours. However, the rate at which contents spoil depends on several factors. Certain contents that include, for example, dairy, homemade soup, and/or tomato may start to spoil much sooner. Also, spoilage may occur faster when contents have been partially consumed. In addition, spoilage may occur sooner with the opening and reclosing of a product holding contents. Proceed with caution when using the product with quick spoiling or partially consumed contents, as pressure may build up in the container and possibly cause forceful ejection of the stopper or contents.
- If contents are left in the container longer than 24 hours, or you suspect spoilage, use caution when opening the container. Contents spoilage can cause pressure inside the container to build, possibly leading to the forceful ejection of the stopper or contents. In such circumstances, before attempting to open the container, ENSURE THE OPENING IS POINTED AWAY FROM THE USER OR OTHER PERSONS TO AVOID INJURY.
- DO NOT use tools or devices to force container to open.
- If you are unable to open container by hand, do not open it and dispose of it at your local waste facility.
- DO NOT use to store or carry carbonated drinks or dry ice. This may cause lid/stopper and contents to eject forcefully or leak.

LIMITED WARRANTY

Thermos L.L.C. warrants this Genuine Thermos Brand product to be free from defects in material or workmanship for five year from date of purchase. This warranty does not cover ordinary wear and tear or color fading, or any condition affected by abuse, neglect, alteration, accident or improper use or maintenance.

We will, at our option, repair or replace any product component part that fails to conform to this warranty within 30 days after its receipt by our factory service department. IN NO EVENT WILL THERMOS BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES.

Some jurisdictions do not allow the exclusion of incidental, consequential or special damages, so the preceding exclusion may not apply to you.

This is a factory guarantee.

Please do not return this product to the retailer.

Send defective unit or component along with written explanation of defect directly to:

Thermos L.L.C. - Warranty Service

355 Thermos Road Batesville, MS 38606, USA

1-800-831-9242

www.thermos.com

In Canada:

1-800-669-7065

www.thermosbrand.ca

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state or province to province.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF QUALITY AND PERFORMANCE, WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SUCH IMPLIED WARRANTIES, REPRESENTATIONS AND CONDITIONS ARE HEREBY DISCLAIMED. THE REMEDIES STATED HEREIN CONSTITUTE PURCHASER'S EXCLUSIVE REMEDIES AND THERMOS'S ENTIRE LIABILITY FOR ANY BREACH OF WARRANTY.

© 2018 Thermos L.L.C. All rights reserved.

THERMOS is a registered trademark in over 115 countries.